

I/O NAMES & STATUSES

2016

INPUTS

1 Main Bottom

Default Status: Auto

Advanced Settings:

Activate Output, #34 Main Ghost Valve

2 Main Top

Default Status: Auto

Advanced Settings:

Disable Output, #22 Main Autofill

3 Seedling Bottom

Default Status: Auto

Advanced Settings:

Activate Output, #33 Seed Ghost Valve

4 Seedling Top

Default Status: Auto

Advanced Settings:

Disable Output, #9 Seed Autofill

OUTPUTS

- 1 **Blue Seed Lights**
Default Status: Auto
- 2 **Red Seed Lights**
Default Status: Auto
- 3 **Seedling Pump**
Default Status: Auto
- 4 **Seedling Recirculator**
Default Status: On
- 5 **Seed Nutrient A**
Default Status: Auto
- 6 **Seed Nutrient B**
Default Status: Auto
- 7 **Seed pH Lower**
Default Status: Auto
- 8 **Spare Seed Doser**
Default Status: Off
- 9 **Seed Autofill**
Default Status: Auto
Advanced Settings:
Interrupt #22 Main Autofill
- 10 **Seed Aerator**
Default Status: On
- 11 **Front Right Spare**
Default Status: Off
- 12 **Front Right Lights**
Default Status: Auto Advanced
Settings: Link to #13 Back Right
Lights
- 13 **Back Right Lights**
Default Status: Auto Advanced
Settings:
Link to #14 Front Left Lights
- 14 **Front Left Lights**
Default Status: Auto Advanced
Settings:
Link to #15 Back Left Lights
- 15 **Back Left Lights**
Default Status: Auto
- 16 **Main Pump**
Default Status: Auto
- 17 **Main Recirculator**
Default Status: On
- 18 **Main Nutrient A**
Default Status: Auto
- 19 **Main Nutrient B**
Default Status: Auto
- 20 **Main pH Lower**
Default Status: Auto
- 21 **Spare Main Doser**
Default Status: Off
- 22 **Main Autofill**
Default Status: Auto
Interrupts #9 Seed Autofill
- 23 **Main Aerator**
Default Status: On
- 24 **Exhaust Fan**
Default Status: Auto
Advanced Settings:
Link to #25 Intake Fan
- 25 **Intake Fan**
Default Status: Auto
- 26 **Vortex Ceiling Fans**
Default Status: On
- 27 **Left Front Spare**
Default Status: Off
- 28 **Floor Fans**
Default Status: On
- 29 **Left Rear Spare**
Default Status: Off
- 30 **Coolbot**
Default Status: Auto
- 31 **CO₂ Generator**
Default Status: Auto
Interrupts #24 Exhaust Fan
- 32 **Unassigned**
Default Status: Off
- 33 **Seed Ghost Valve**
Default Status: Auto
Advanced Settings:
Link to #9 Seed Autofill
- 34 **Main Ghost Valve**
Default Status: Auto
Advanced Settings:
Link to #22 Main Autofill